


EGR VALVE 88064

Technical information for the correct installation of 88064 .

It would be advisable to remove the aluminum cover and clean it thoroughly.
Next, measure the distance between the base where the new EGR valve will be placed and the seat of the valve's head.

This distance must be **49 mm**.

The distance must be measured in order to make sure that there are no deformities on the aluminum cover. Indeed, if the distance is greater than 49mm, the new valve will not close properly and as a result it will be malfunctioning again, in a short period of time.

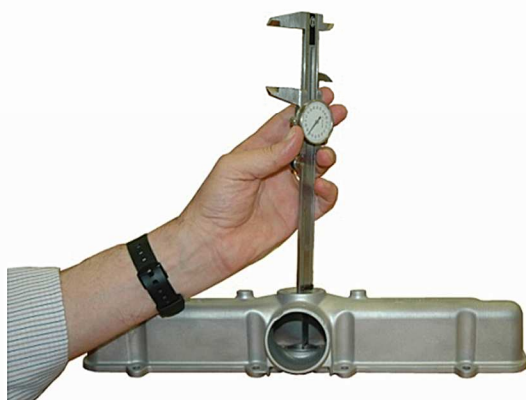

The dismantling of the aluminum cover guarantees the proper cleaning and it gives us the opportunity to check the correct closure of the EGR valve.