

MATCHING
OE
QUALITY

FIRST LINE
THE ALL MAKES SPECIALIST



AUTOMOTIVE

VAG GROUP

Audi A3, Seat Leon / Toledo, Skoda Octavia, Volkswagen Beetle / Bora / Golf IV

FSK6066

VAG rear axle beam bushes


SPECIAL INSTRUCTIONS & FITTING TIPS

The bush originally fitted by OE was manufactured with a metal casing. Replacement bushes have subsequently been modified and are now utilising a "plastic" type casing.

Firstly, ensure that the metal casing of the old bush is removed prior to fitting new bush!

When installing the replacement bush it is important that it is in the correct orientation, see diagram.

First Line recommends the use of Specialist Tools to install the new bushes to prevent deformation and damage which could seriously compromise the effective operation and service life of the new bushes.

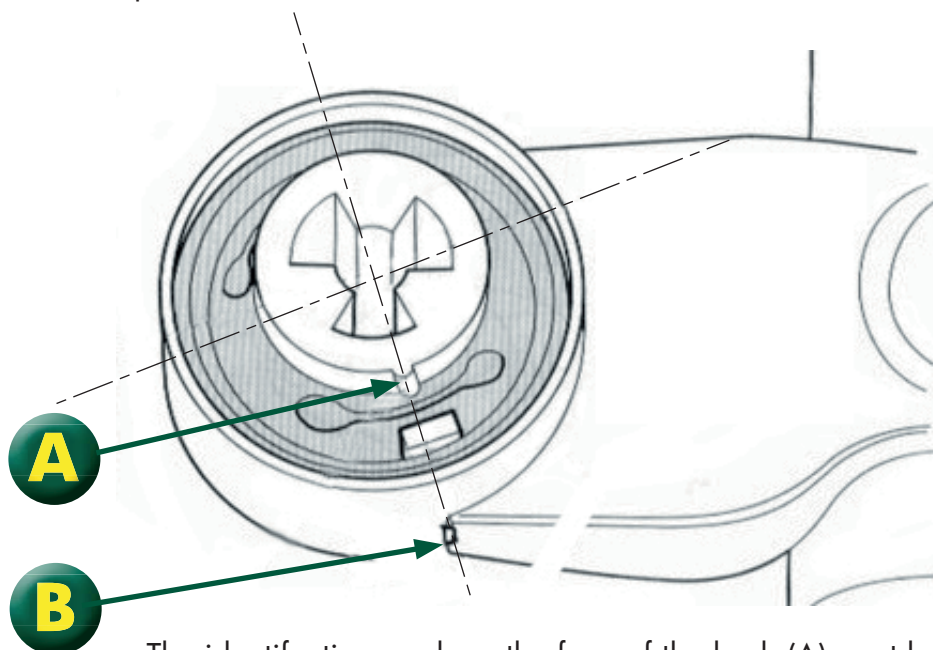

The identification mark on the face of the bush (A) must be aligned with the edge of the trailing arm on the axle beam (B)

J&S Automotive Distributors

Unit 17, Park West Road, Park West, Dublin 12, Ireland

t: 01-629 7999 | f: 01-629 5664

e: sales@jsautomotive.ie | w: www.jsautomotive.ie

TECHNICAL INFORMATION SHEET